

How to Fit & Adjust


PUTTING ON THE HARNESS IS SIMPLE

- The label goes on the outside
- The ring goes in the front
- The strap goes behind the front legs
- Click the buckle



ADJUSTING THE HARNESS IS SIMPLE TOO

- Adjust depending on how exuberant a walker your dog is.
- It should be snug, yet not so tight it bites your dog. 2-4 fingers tightness is about right
- 9 out of 10 dogs prefer you take the harness off them to adjust it
- During the next several walks, adjust the harness to what works best for both of you; looser around the body, tighter on the chest, maybe vice-versa. Let common sense guide you

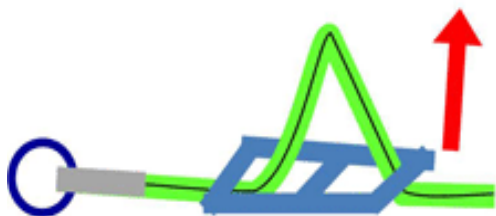

CHEST SIZE ADJUSTMENT

BOTH STRAPS MUST BE ADJUSTED EQUALLY AND REMAIN EQUAL LENGTHS

- This is the part that sits centered on your dog's chest.
- Push both straps thru adjuster - at the same time
- Slide adjuster
- Pull straps flat again

BELLY SIZE ADJUSTMENT

- Adjusts like a knapsack strap
- Push webbing up thru adjuster
- Slide adjuster
- Pull webbing flat again



SIDE WIDTH ADJUSTMENT

- The label side is sewn, the other side is 'slidey'
- 'Scooch' BOTH sides up, to just above the shoulders
- You might need to readjust the belly strap now
- Now set the slidey side - as noted in the video - so it is perfect for your dog

It Should Look Like It Looks On Teddy

NOW CLIP ON THE LEASH AND AWAY YOU GO!

